Fabric Care Reference Guide




Your Space-Saving Laundry Solution Since 1984

Forget about spending hours in strange laundromats. Simply throw a load of laundry in, set the controls, and relax. Your Splendide will go from wash to dry automatically - adding laundry aids right when they're needed! Read a magazine, prepare dinner, take a naplet Splendide take care of the rest and return to incredibly clean, dry laundry!





No more laundromats! With Splendide, wash and dry laundry in the privacy and security of your own Home.

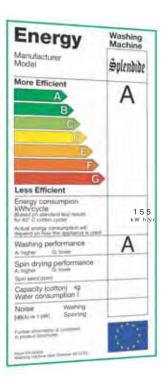

Where's the filter?

Splendide's revolutionary new pump system eliminates the need for you to clean a filter! The only reason you should ever need to enter the pump pre-chamber (behind the toe-kick) is if items like keys or coins accidentally make their way into your wash load.

The fact is, your Splendide is so gentle on fabrics that very little lint is produced. The small amount of lint that accumulates is safely expelled through the drain (and out the vent in a vented model).



How do my clothes get so clean with so little water?

Your Splendide uses the latest in washing technology and needs less than half the water to get wash results that are twice as good! An ENERGY STAR® product that's rated in the highest CEE® tiers, 3A and 3B, your Splendide uses just 9-16* gallons of water to effectively wash and rinse all your fabrics.

How? First, Splendide's revolutionary "Cascade" washing effect emulates the energetic motion of hand washing - cleaning clothes more thoroughly while treating fabrics gentler. Meanwhile, Splendide's sophisticated "brain" watches over wash parameters like water level and foam control - making sure your clothes are the cleanest they can be when the wash cycle is complete. Because of these technological advances, your Spendide is rated at the top of it's class (Class A**) in terms of energy efficiency AND wash performance!

* Average. Your Splendide may use as little as 5 gal. per wash load. **Class A Norm EN 60456 Washing Machine



Avoid Wrinkling Checklist

Don't overload the drum

Don't load large and small items together

Don't add too much detergent

Use fabric softener for automatic wash to dry

Avoid COLD Wash Temperatures

Dry clothing at a lower temperature

Choose a cycle with a lower spin speed

Shake or fold items before drying

Remove items when the cycle is complete

Do not overdry your clothes

Wash and dry full loads, but don't overload the drum. Clothing should always have room to move freely.

Always load items of similar size and weight. Remember, heavier fabrics, such as towels and denim jeans, may require extra room (and time) to dry.

Use no more than 1-2 tablespoons of a High Efficiency (HE) detergent per wash load. Using too much detergent can cause fading, wrinkling, and deteriorate fabrics.

Use 1-2 tablespoons of fabric softener **OR** a detergent with a built-in softener so clothes fall easily from the drum after spinning.

For fabrics that will allow it, use Warmer wash temperatures for the best wash results and to prevent fabric wrinkling.


Always follow the cycle and temperature guidelines found on your clothing tags. For garments that require Medium or Low drying temperatures, choose Permanent Press Dry with EASY IRON pressed **OR** choose Delicates Dry.

Cotton Heavy Duty items dry faster using the 1200 RPM high spin. However, if you're not laundering items like jeans or towels, choose a Permanent Press or Delicates cycle, **OR** press the Low Spin (600 RPM) button.

Give garments a quick shake and/or fold them when washing is complete, before starting the dry cycle. This keeps large items from remaining in a tight ball in the dryer - helping them dry faster and minimizing wrinkling.

After the door lock releases (1-2 min.), fold or hang your clothes when they are still hot from the dryer.

Never overdry your clothes. Take clothes out while they are still slightly damp. Overdrying wastes energy, harms fabrics, causes wrinkling and shrinkage, and shortens fabric life.

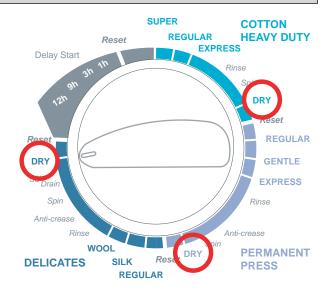

How Do I Wash ONLY?

- 2. With the machine OFF, Select a Wash Cycle
- 3. Set the Dry Time knob to "0" min.
- 4. Press "ON"

How Do I Dry ONLY?

- 1. With the machine OFF, Select a Dry Cycle (See Above)
- 2. Set the Dry Time knob to desired time
- 3. Press "ON"



Splendide Div. Westland Sales Corporate Headquarters 15650 SE 102nd Ave. Clackamas, OR 97015 - USA Phone: 503.655.2563 Fax: 503.656.8829 e-Mail: splendide@westlandsales.com Web: www.splendide.com